QUICK REFERENCE GUIDE

Panel Type: ELK M-1 Keypad Type: Navigator



Moore Protection, Inc.
318 Avenue I #819
Redondo Beach, CA 90277
Phone: (310)540-7229
Fax: (310)540-7252
inquiries@mooreprotection.net
www.mooreprotection.net
ACO #: 5965

		ACO #: 5965
<u>FUNCTIONS</u>	<u>INSTRUCTIONS</u>	<u>RESULTS</u>
ARM PERIMETER (STAY)	•PRESS "STAY" BUTTON	*DISPLAY WIL CHANGE TO ARMED STAY *ALL INTERIOR ZONES WILL BE EXCLUDED
ARM PERIMETER WITH NO DELAY (INSTANT STAY)	•PRESS "STAY" BUTTON TWICE	•NO ENTRY DELAY ON DOORS
ARM ENTIRE SYSTEM (AWAY)	•ENTER "EXIT" BUTTON	*DISPLAY WILL CHANGE TO ARMED STAY *EXIT TONE WILL BEGIN TO COUNTDOWN *LEAVE PREMISES WHILE DELAY IS ACTIVE *AT THEN END OF THE EXIT DELAY THE SYSTEM WILL BE FULLY ARMED AWAY
DISARM SYSTEM	•ENTER USER CODE	•ENTRY DELAY TONE WILL STOP AND SYSTEM WILL BE DISARMED
BYPASS INDIVIDUAL ZONE	•PRESS "BYPASS" BUTTON •ENTER ZONE # •PRESS "BYPASS" BUTTON AGAIN	•THE DISPLAY WILL INDICATE WHENEVER ONE OR MORE ZONES ARE BYPASSED
BYPASS MULTIPLE ZONES OR UNSURE OF ZONE #	•PRESS "SHOW F-KEYS" BUTTON •PRESS "F4" BUTTON	•ALL SENSORS SHOWING OPEN WILL BE BYPASSED
UN-BYPASS ZONE(S)	•PRESS "BYPASS" BUTTON •PRESS "0" BUTTON •PRESS "BYPASS" BUTTON AGAIN	•BYPASS LIGHT WILL TURN OFF
TURN CHIME ON/OFF	1) PRESS "CHIME" BUTTON ONCE 2) PRESS "CHIME" BUTTON A SECOND TIME 3) PRESS "CHIME" BUTTON A THIRD TIME 4) PRESS "CHIME" BUTTON A FOURTH TIME	1) CHIME TONE WILL TURN ON 2) CHIME VOICE WILL TURN ON 3) CHIME TONE/VOICE WILL TURN ON 4) CHIME TONE WILL TURN OFF
CANCEL/SILENCE ALARM	◆ENTER USER CODE	+ALARM WILL BE CANCELLED & SILENCED
SILENCE MAINTENANCE OR TROUBLE CONDITIONS (I.E. LOW BATTERY, AC FAILURE, COMMUNICATIONS FAILURE, ETC.)	1) PRESS "CLEAR" BUTTON 2) ENTER USER CODE •CALL SERVICE/REPAIR AT (310)540-7229 x4	1) SILENCES TROUBLE BEEPING 2) ACKNOWLEDGES TROUBLE CONDITION
RESET SMOKE DETECTORS	•PRESS "RESET SMOKE DETECTORS" BUTTON	*SMOKE DETECTOR VISUAL INDICATORS WILL DISAPPEAR
CHANGE USER CODES & NAMES	PRESS "MENU" BUTTON PRESS "CHANGE USER CODES" BUTTON ENTER MASTER LEVEL USER CODE PRESS "NEXT USER BUTTON" OR "PREVIOUS USER BUTTON" TO SCROLL TO SPECIFIC USER 1) TO CHANGE USER CODE: PRESS "CHANGE CODE" BUTTON ON USER ENTER NEW 4-DIGIT CODE 2) TO CHANGE USER NAME: PRESS "EDIT NAME" BUTTON ON USER USE ON-SCREEN KEYBOARD TO TYPE USER NAME PRESS "SAVE NAME" BUTTON TO SAVE NEW USER NAME *TO EXIT PRESS "X" BUTTON	•NEW USER CODE WILL TAKE AFFECT