



Westec 5000 User Guide

<u>COMMAND</u>	<u>ACTION</u>
1 - HOME	Arms the Perimeter Protection – To activate hold HOME (2 Beeps)
2 - ALL	Arms both the Perimeter & Interior Protection – To activate hold ALL (2 Beeps)
3 - OFF	Turns system Off- enter User Code, ENTER, OFF, ENTER
4 - INT A	Turns Interior Group A On/Off – To activate hold INT A (2 Beeps)
5 - INT B	TURNS Interior Group B On/Off – To activate hold INT B (2 Beeps)
6 - INST	Turns Entry/Exit Delay On/Off – To activate hold INST (2 Beeps)
7 - CHIME	Announces with Tone/Voice any Sensor that has been opened – To activate hold CHIME (2 Beeps)
8 - BYPS	Allows the Bypass of any Zone within the system: A. To Bypass Protection that is already open – enter User Code, ENTER, HOME or ALL, BYPS, then ENTER B. To Bypass when System is Armed – enter User Code, ENTER, BYPS, Zone Number, then ENTER
9 - CODE	Additional User Code Number – To activate enter User Code, ENTER, 9, ENTER. To Change Code: enter User Code, ENTER, 9, the Code you want in, ENTER
0 - TEST	Test the System- enter User code, ENTER, 0, ENTER (Repeat to Exit Test Mode)

To Deactivate all of the above commands (Except Bypass & Code): enter User Code, ENTER, Command, ENTER: Once you are in the Command Mode simply press your Command Selection. Enter System will deactivate this command if on or will activate this command if off.

Moore Protection Inc.

318 Avenue I #819 Redondo Beach, CA 90277

Phone: (310) 540-7229 • Fax: (310) 540-7252 • Email: inquiries@mooreprotection.net

www.MooreProtection.net

ACO #: 5965